


NOTES:

1. UNLESS OTHERWISE SPECIFIED FABRICATE PER IPC 6012 CLASS 2
2. MATERIAL: 180HR 6 LAYERS 0.031' +/- 0.004' OVERALL
FINISHED COPPER WEIGHT TO BE 10Z ALL LAYERS
3. SOLDER MASK BOTH SIDES LPI GLOSS BLACK
4. BOTH SIDES SILKSCREEN: COLOR WHITE
5. SURFACE FINISH: ENIG RoHS COMPLIANT
6. ELECTRICAL TEST : Required with Cert and Stamp

Minimum copper wall thickness of plated-thru holes to be .0008 inch min.

Max warp and twist to be .0075 inches per inch.

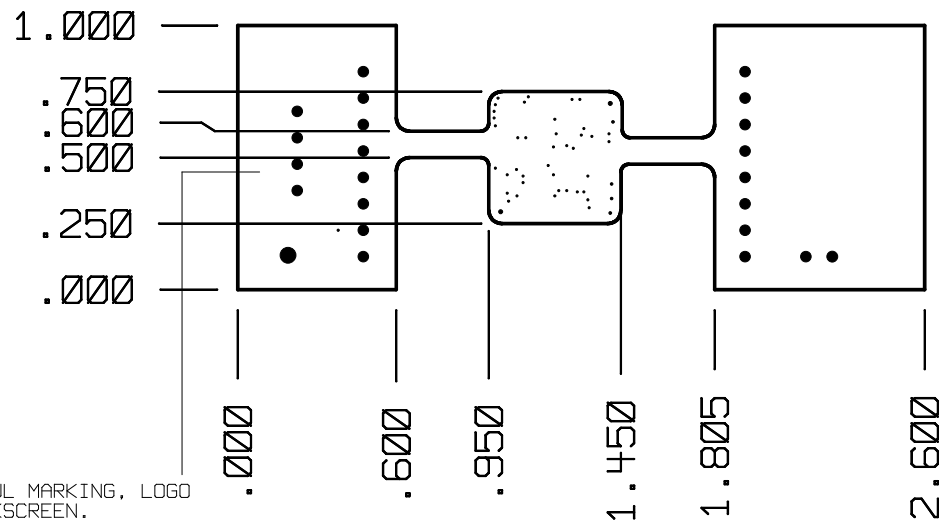

HOLE TOLERANCE: +/- 0.003'

Drill CHART (MILS)

=====

Tool	Size	Pltd	Qty
====	====	====	====
1	8	Y	40
2	10	Y	4
3	15	Y	2
4	40	Y	21
5	41	Y	1
6	60	Y	1

DATE CODE (WWYY), UL MARKING, LOGO
BOTTOM SIDE IN SILKSCREEN.

FOLLOW GERBER OUTLINE FOR ANY UNDIMENSIONED AREAS.

PART: A302801K REV 2